

3. SCHEMATIC DIAGRAM
- See pages 12 to 13 for Converter Board Schematic Diagram (Only for ICF-R800).
 - See pages 12 to 14 for Control Section Mounting Diagram.
 - See page 14 for notes.

